


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Step 1. Assemble left and right ends.

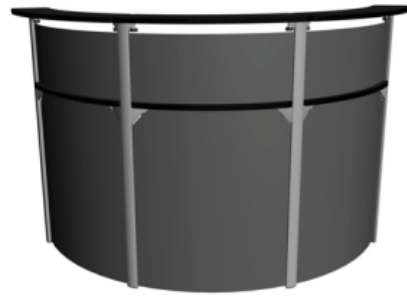

Step 4. Insert panels.



Step 2. Attach center counter section.



Step 3. Attach transaction tops. (end tops have 2 holes at termination end)

