

Step 1 866.652.2100 NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM. Assure that a good connection is made and tighten to secure.

Description
Left Leg Assembly w/ A10 Clamps Attached
Right Leg Assembly w/ A10 Clamps Attached


bly w/ A10 Clamps Attached Upper Curved Vertical w/ A10 Clamps Attached 12A

**Upper Curved Vertical** 12

13 23"w Horizontal


## Step 1:

NOTE: Can be assembled either face down on floor then lifted upright or upright as shown in drawings.



- B) Connect vertical extrusions [12 and 12A] to leg assemblies [10 and 11] using vertical connection bar as shown.
- C) Connect upper horizontal extrusion [13] between verticals [12 and 12A] placing it about one inch down from top.

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

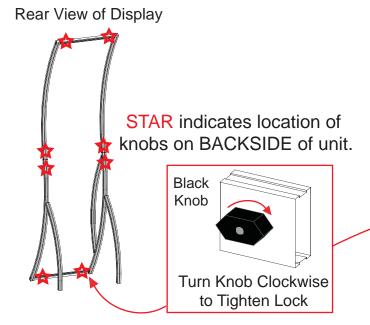



Vertical

13

Connection Bar-

Step 1

**Graphic Attachment** Attach graphic to Velcro located on back of assembled banner stand.

Slide Connection Bar into lower leg assembly. Slide upper vertical over bar and secure both.

horizontal into groove

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

10

866.652.2100

