


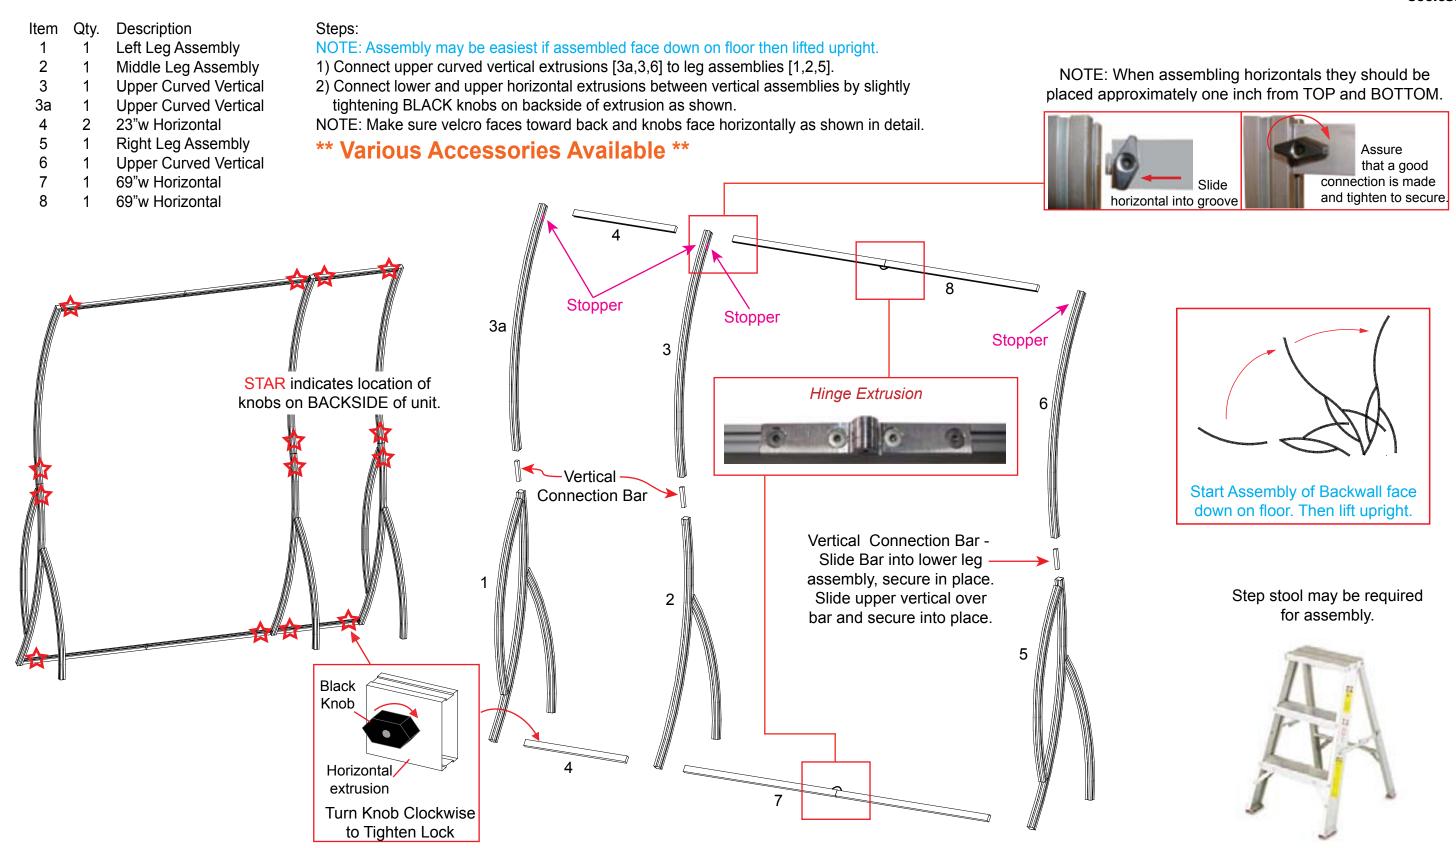

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING



www.classicexhibits.com

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING



Attach decorative wing and blades to A10's attached to Backwall as shown.




Decorative Blade Attachment (if accidently removed)
Slide A10 Clamp into groove of square extrusion.

When desired location is found, tighten set screw to secure.



Tighten plastic knob to secure Wing in place.

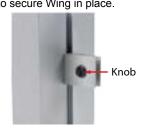







(if necessary)



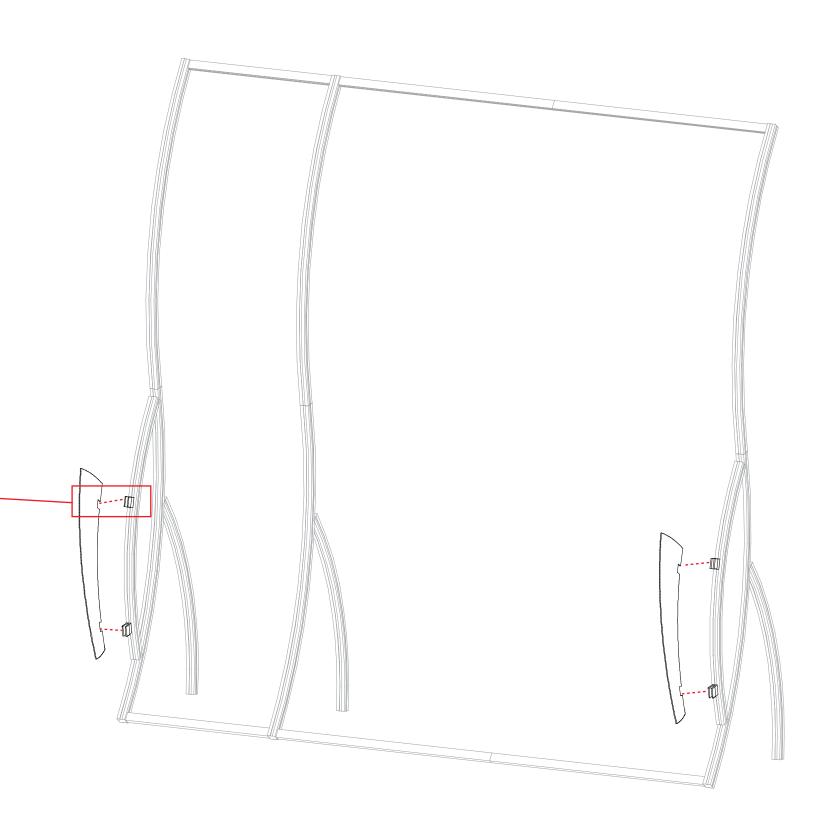

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

© 2014

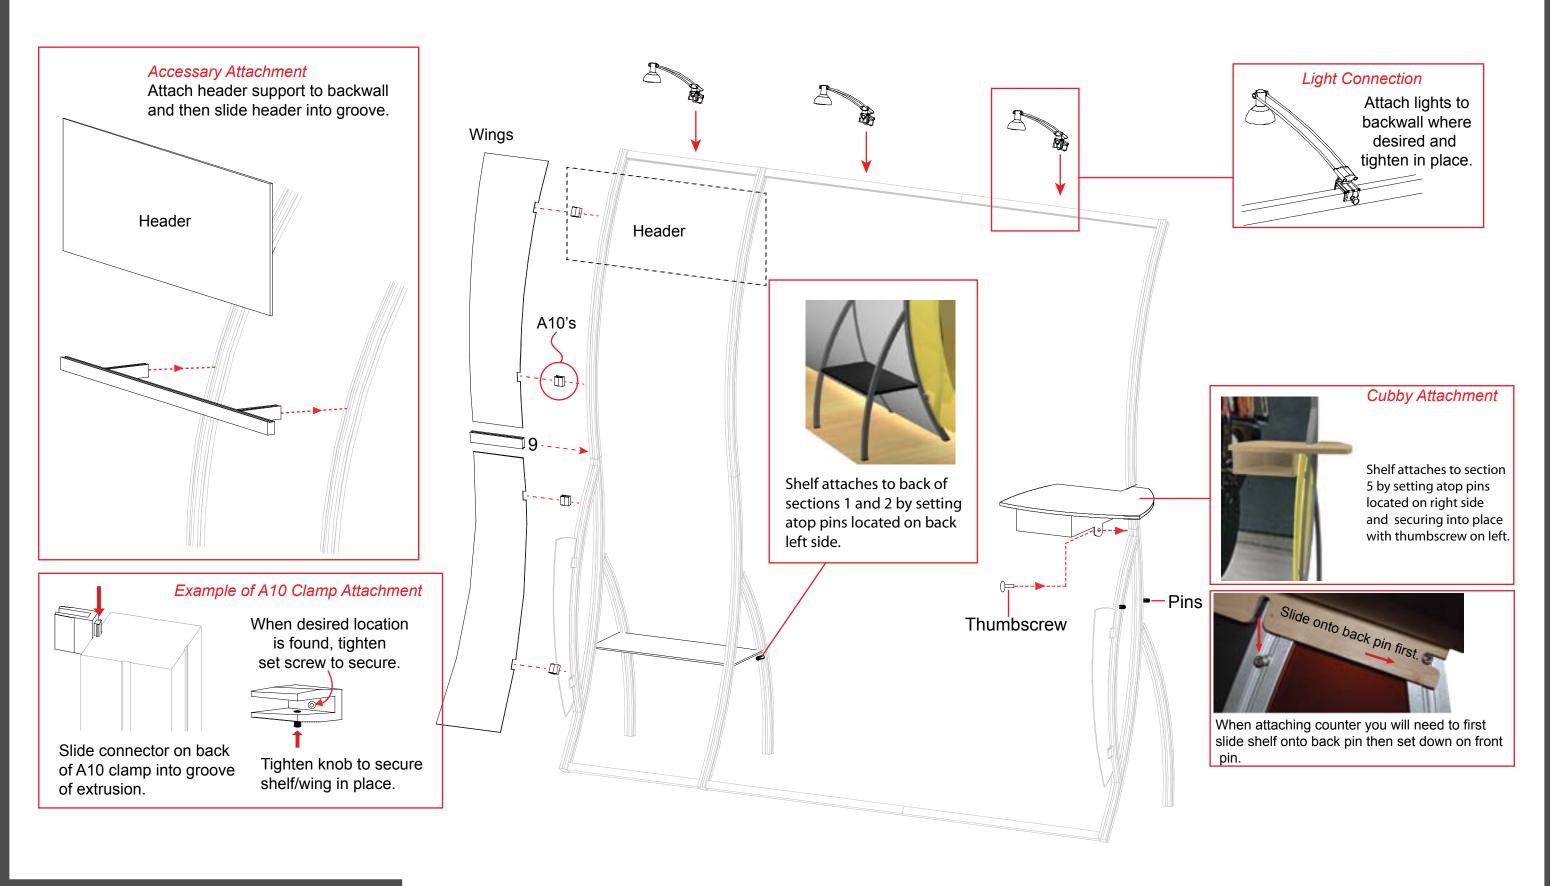

www.classicexhibits.com

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

Part Number Description

A Left Leg Assembly
B Right Leg Assembly


C Horizontal Extrusion


D Horiontal Extrusion w/ Door Stopper


## Steps:

- 1) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
- 2) Insert Laminated infill into grooves of leg assemblies [A and B].
- 3) Attach extrusion door between leg assemblies [A and B] and on top of laminated infill.
- 4) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

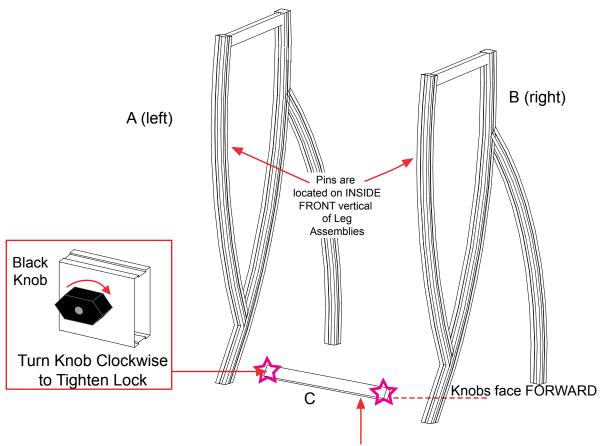



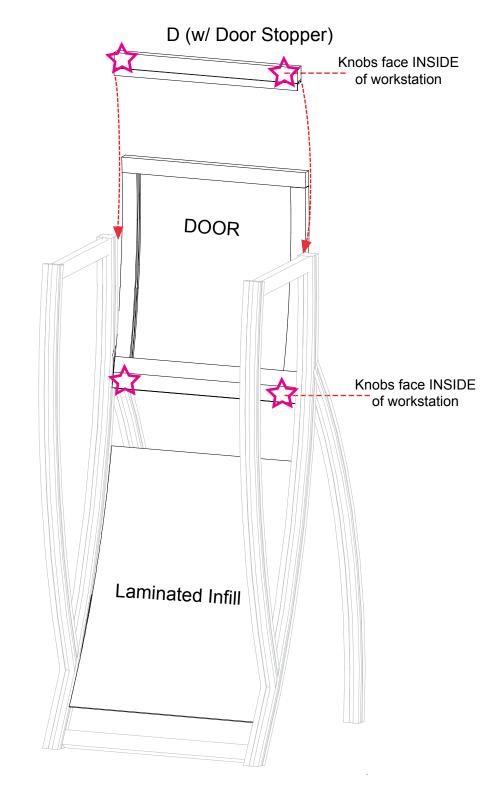



www.classicexhibits.com


© 2014

Part Number Description


E Horizontal ExtrusionF Horizontal Extrusion

## Steps:

- 1) Attach horizontal extrusion [E] between vertical leg assemblies [A and B] as shown below.
- 2) Insert Laminated infill into grooves of vertical leg assemblies [A and B].
- 3) Attach upper horizontal extrusion [F] between vertical leg assemblies [A and B] atop infill.
- 4) Place internal shelf into assembled pedestal atop pins..
- 5) Set Counter atop assembled pedestal and secure with Velcro straps attached to underside of top.

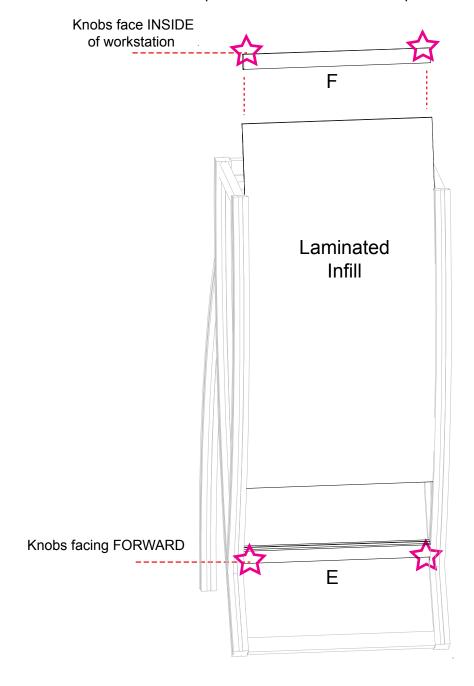

Place internal shelf into workstation then place counter atop assembled workstation.

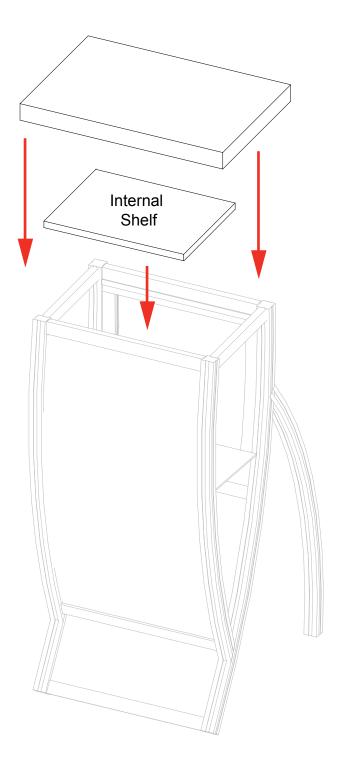






www.classicexhibits.com


© 2014


Top View of Each Level

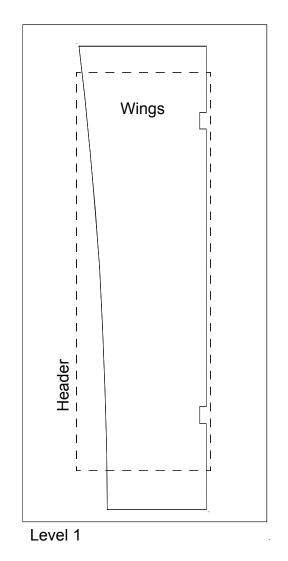

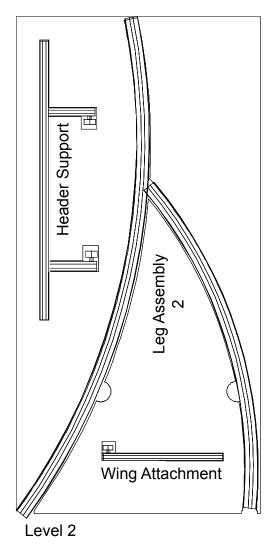

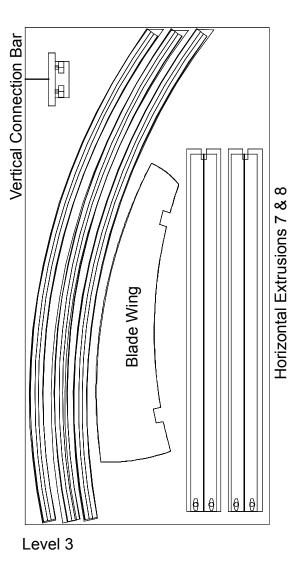

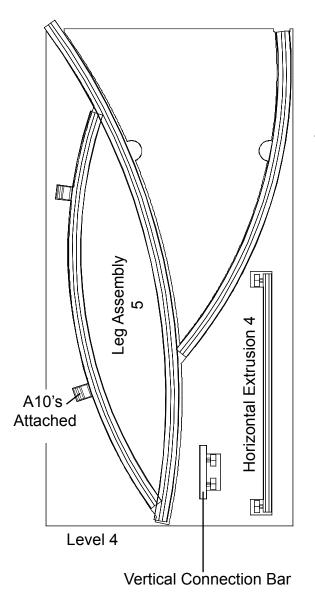


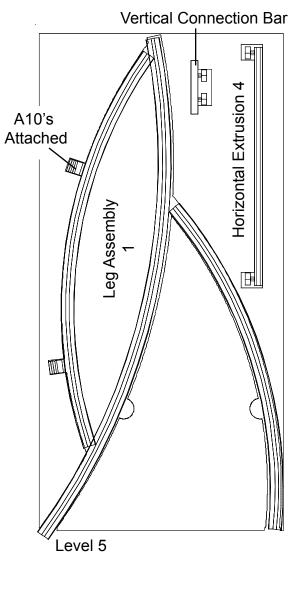

## Additional Items:

- Setup Hardware
- Graphic
- (3) Lights

## Top View

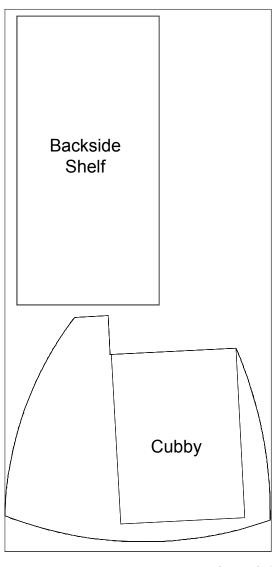

Level 1

Top View of Each Level

