


Steps: 1) Attach base [1] to post using bolt. 2) Attach square plates [4] to curved vertical using bolts. NOTE: Square plate [4] must rotate to left and right before installing clamshell. 3) Attach clamshells [5] to square plates [4] using hex nuts. 4) Insert iPad and feed wire through holes as shown in detail. Lock Lock Hex 💭 Nuts iPad Mount \bigcirc Wire Access **Clamshell Attachment** Post Rotates vertically Counter Тор **SETUP INSTRUCTIONS**

www.classicexhibits.com

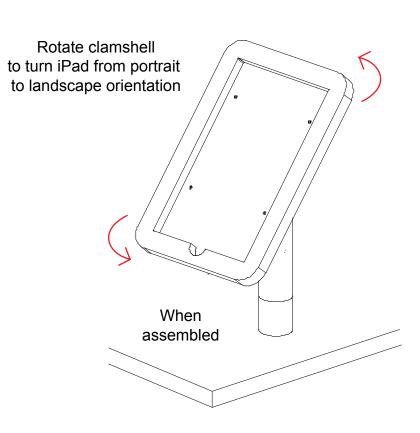




If you would like to tell us about your experience with your setup instructions please email us at info@classicexhibits.com




General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

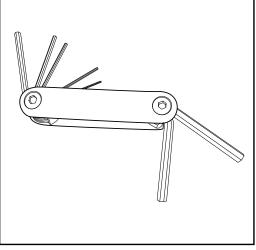

Hex Tool - Essential for Assembly

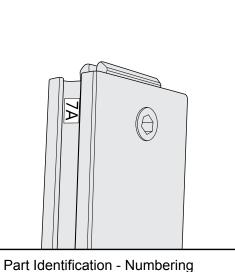







- Cleaning & Packing
 - For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
 - Keep exhibit components away from heat and prolonged sun exposure.
 Heat and UV exposure will warp and fade components.
 - Retain all provided Packing Materials.
 All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

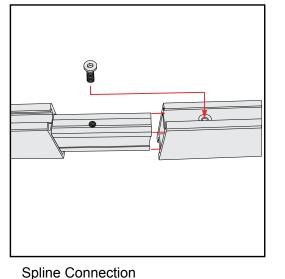

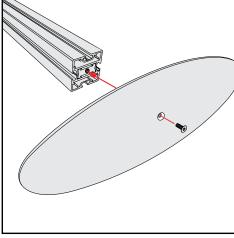


Base Plate & Extrusion Connection



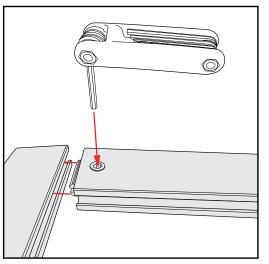

Extrusion & Lock Connection

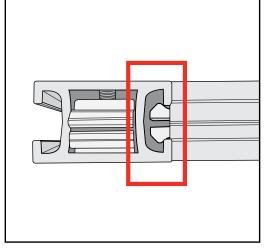

www.classicexhibits.com

Engaged Lock

ALL CONNECTIONS MUST BE TIGHTLY SECURED

LADDERS OR LIFTS MAY BE REQUIRED

DO NOT USE POWER TOOLS

