


Order #XXXXX MOD-1331 Workstation


Steps:

- 1) Attach lower verticals [2] and [3] to base plate [1], using bolts.
- 2) Attach upper vertical [4] to lower vertical [2], using connector.
- 3) Attach shelves to vertical [2].
- 4) Attach large graphic to verticals [3], using screw caps. See Large Graphic Attachment detail.
- 5) Attach flange plates [5] to tops of verticals [3], using bolt.
- 6) Attach counter to flange plates [5] vertical [2], using wing nuts and thumb screws. See Counter Attachment detail.
- 7) Attach small and curved graphics to [4], using A10 clamps. See A10 Clamp detail.
- 8) Attach monitor mount to [4]. See Monitor Mount detail.

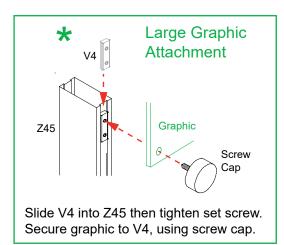

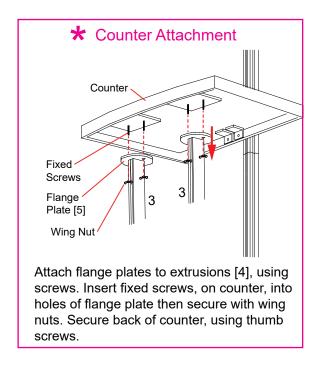

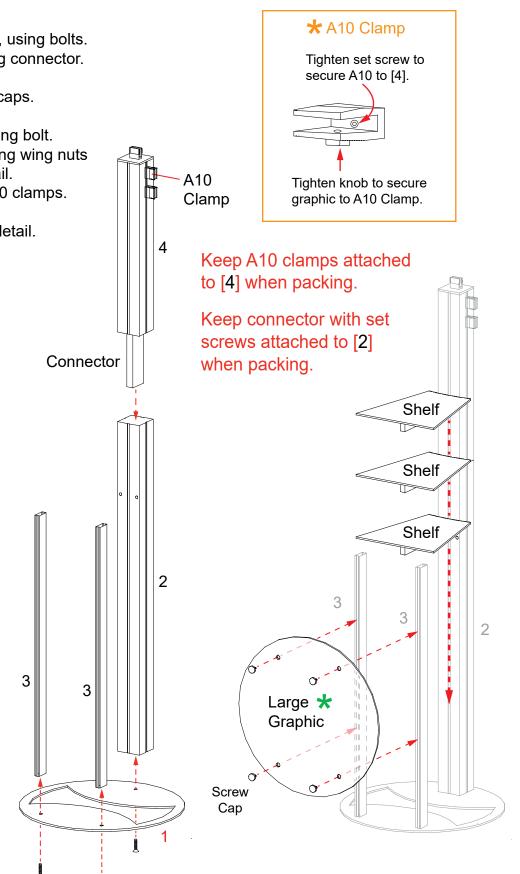

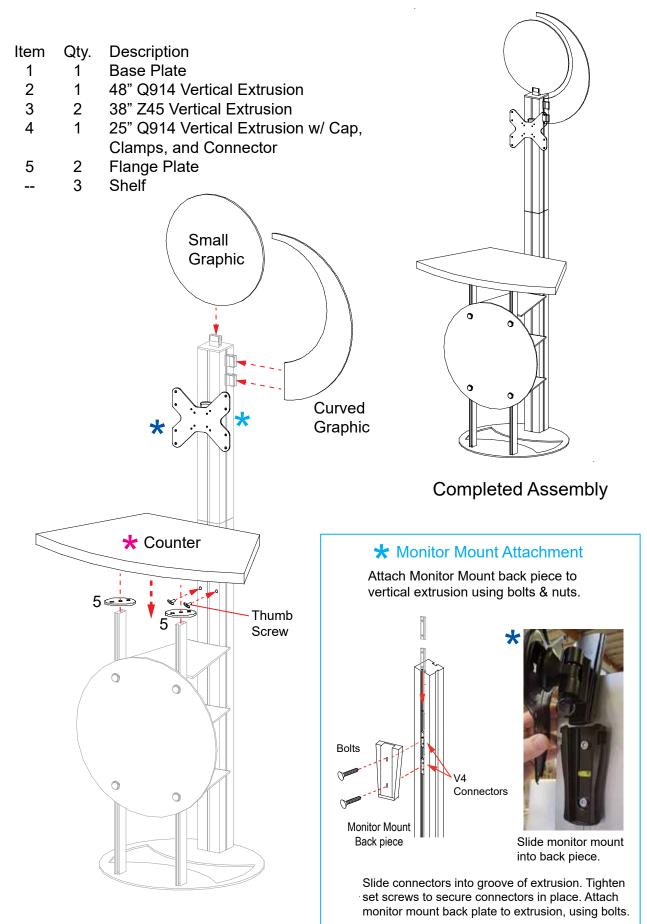

SETUP INSTRUCTIONS



General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts:
 Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
 Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
 All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

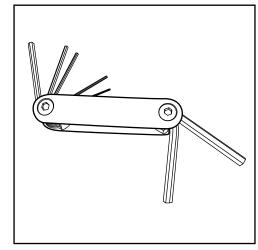


Hex Tool - Essential for Assembly

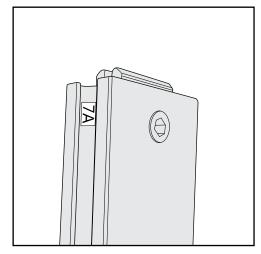


Part Identification - Numbering



WARNING

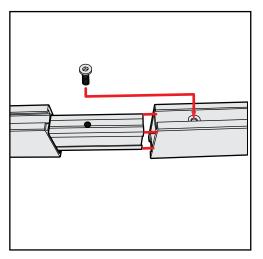

Spline Connection

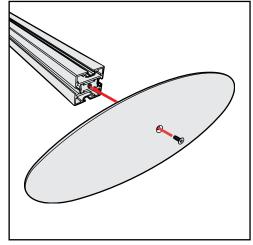


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS



LADDERS OR LIFTS MAY BE REQUIRED

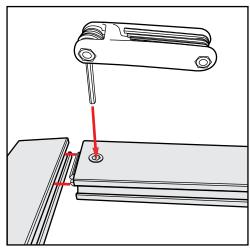

Extrusion & Lock Connection

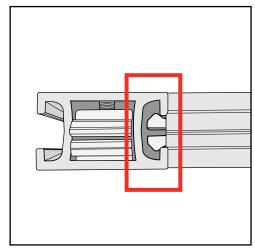

Engaged Lock



ALL CONNECTIONS MUST BE TIGHTLY SECURED

Top View of Each Level

