
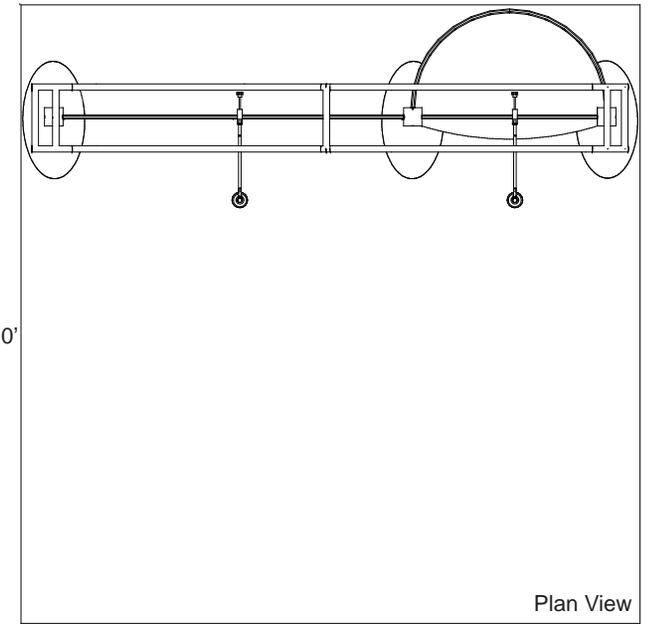


**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

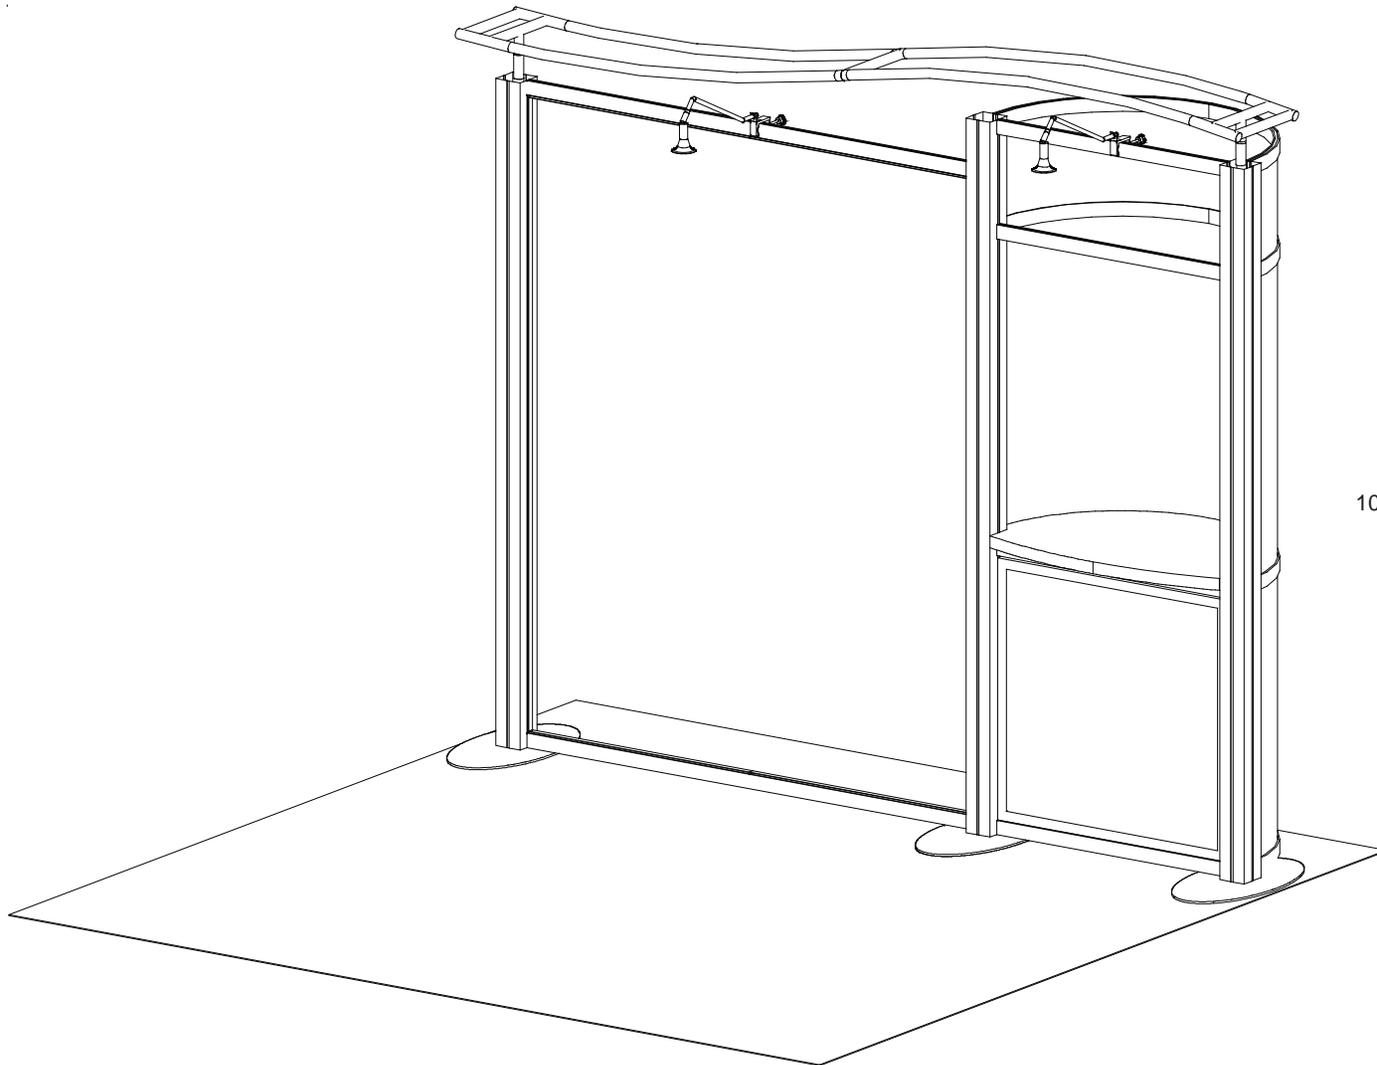


**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

Number	QTY.	Description
1	3	Base Plates
2	1	84" Vertical Extrusion w/Canopy Attachments
3	1	90" Vertical Extrusion
4	1	90" Vertical Extrusion w/Canopy Attachments
5	2	66" Horizontal Extrusion w/ SEG Extrusion Attached
6/6A	3/1	60.209" Curved Horizontal Extrusion
7	4	34" Lower Horizontal Extrusion


Steps:

- 1) Attach vertical extrusions [2, 3 and 4] to base plates [1].
- 2) Attach horizontal extrusions [5] between verticals [2 and 3].  
*Note: Opening of SEG extrusion must face forward\*\**
- 3) Attach curved horizontals [6 and 6A] to back groove of extrusions [3 and 4], placing infills between horizontals as shown.
- 4) Connect horizontal extrusions [7] between verticals [3 and 4].
- 5) Attach door where indicated.

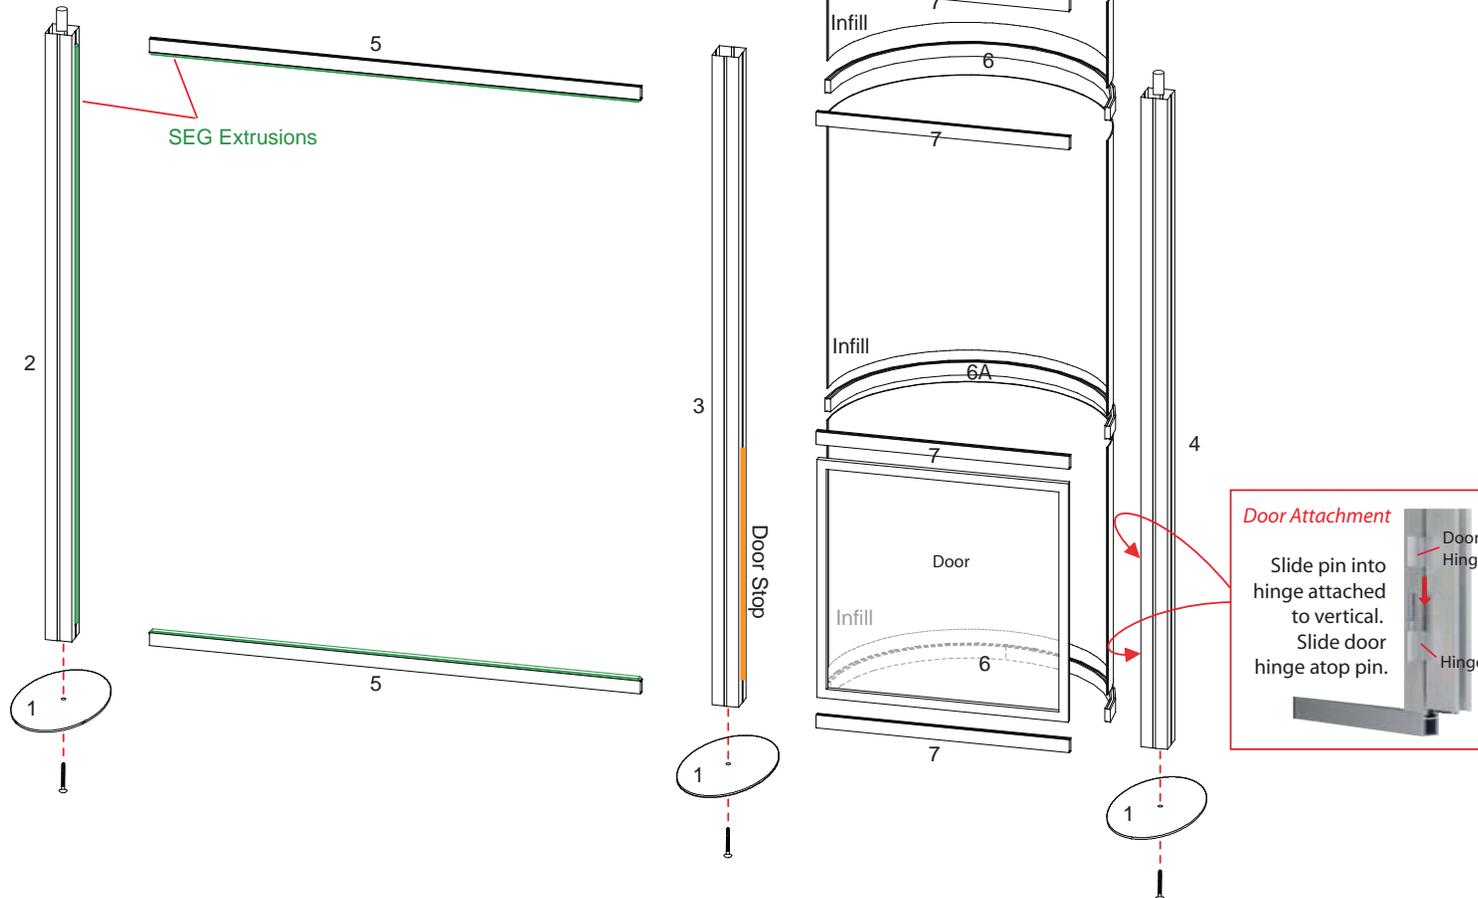


**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

**Light Connection**

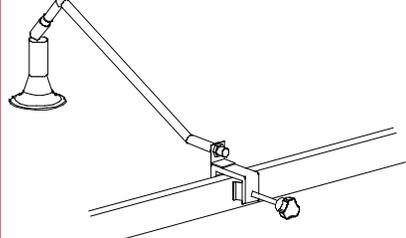

Attach Light to Horizontal Extrusion and secure clamp.

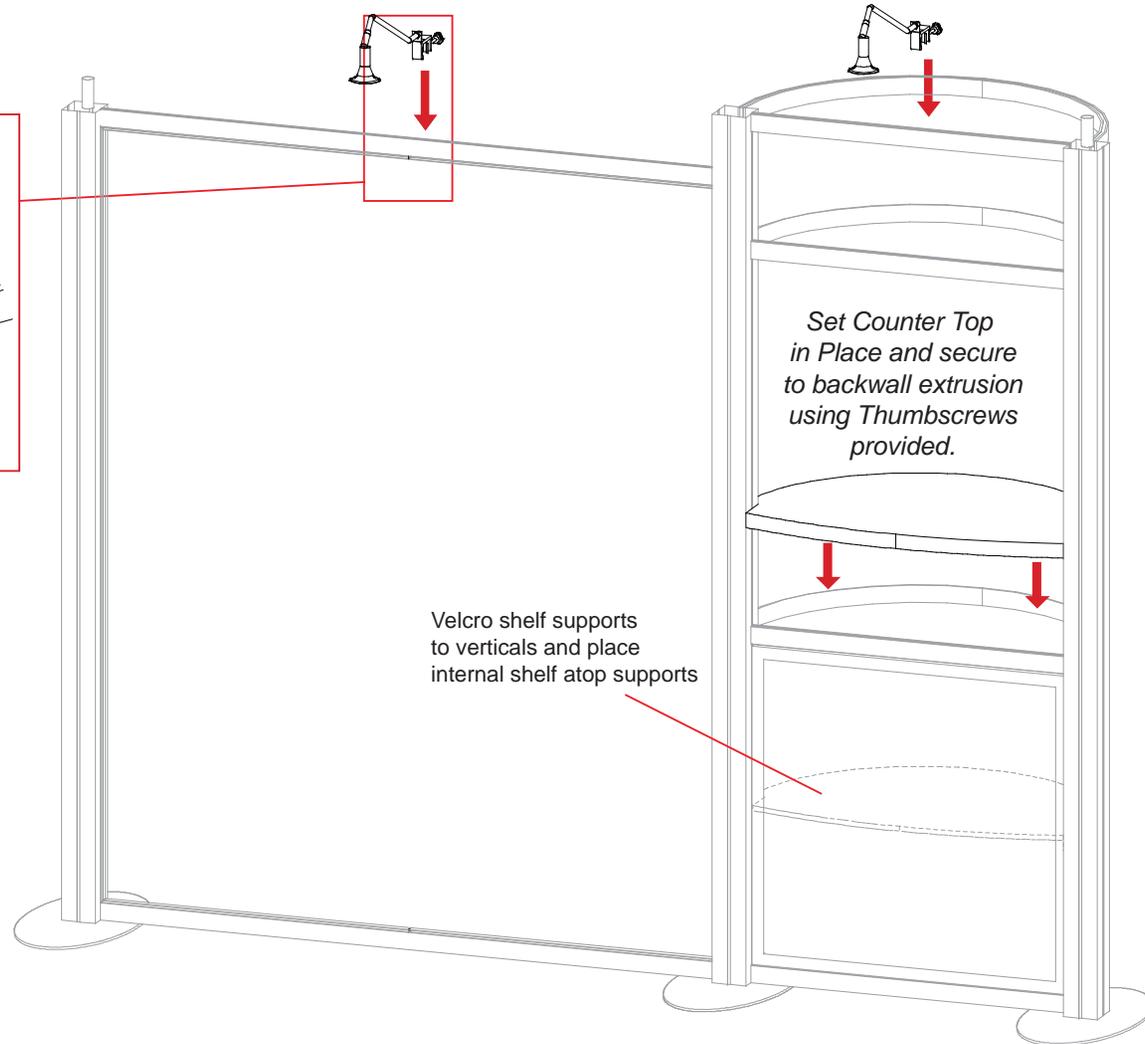

Set Counter Top in Place and secure to backwall extrusion using Thumbscrews provided.

Velcro shelf supports to verticals and place internal shelf atop supports

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**




**Using Your Setup Instructions**

The Aero Overhead Sign Setup Instructions are created specifically for your configuration. They include an exploded view of the frame which is sequentially numbered. We encourage you to study the instructions before attempting to assemble your exhibit.



Connections are kept very simple: no tools. Everything assembles with push-button connectors and pre-connected horizontal sections.

**Cleaning and Packing Your Display**

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


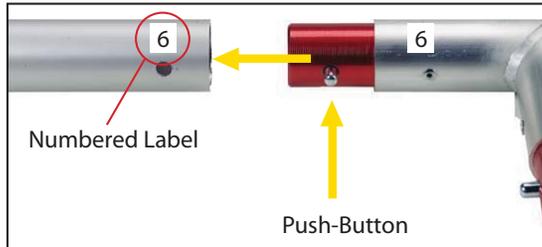


Connections are made by holding the button down and sliding the red tube into opposing tube until the connection is made. To disassemble push button and pull or twist extrusions apart.

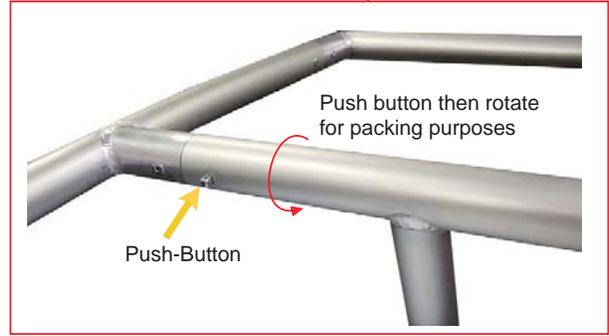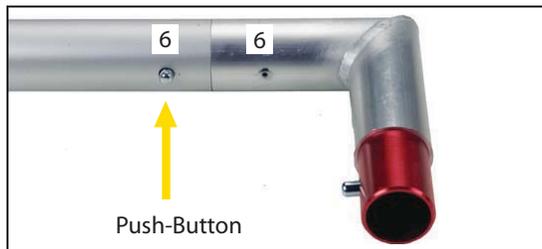

Steps:


- 1) Connect canopy pieces together as shown.
- 2) Apply pillow case graphic to assembled canopy.

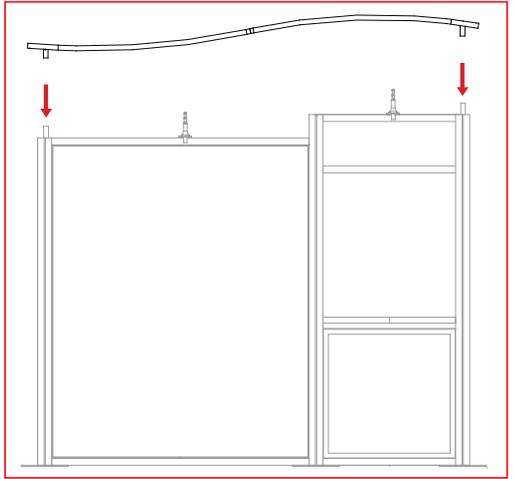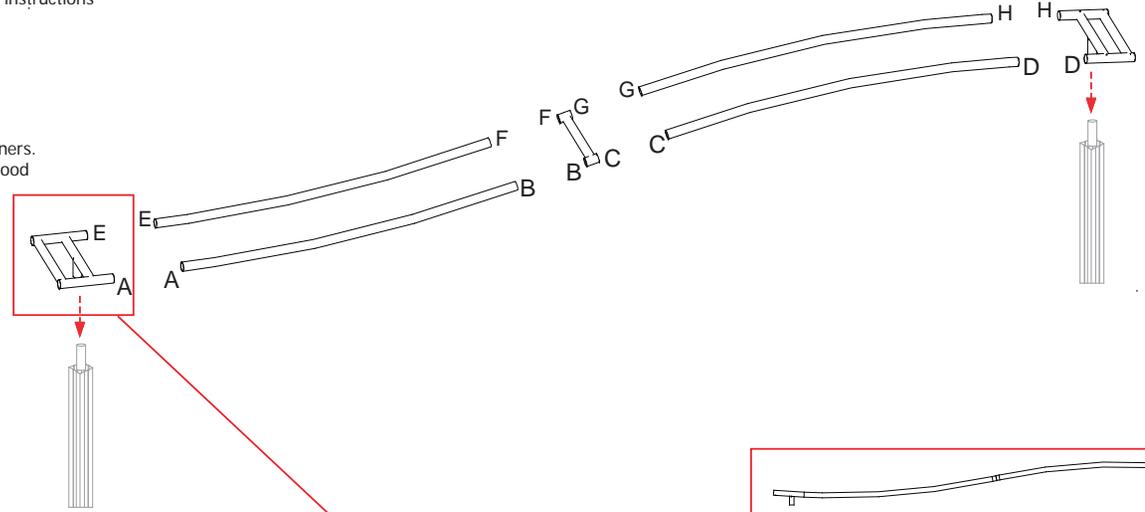

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

Setup Instructions:

- A) Use standoff screws to secure the front panel with door and back panel of the pedestal to the side panels.
- B) After assembling front, back, and side panels, slide floor into the bottom of the pedestal. The floor will sit on pins on the inside of the side panels.
- C) After floor is in place, use velcro attachments to install shelf.

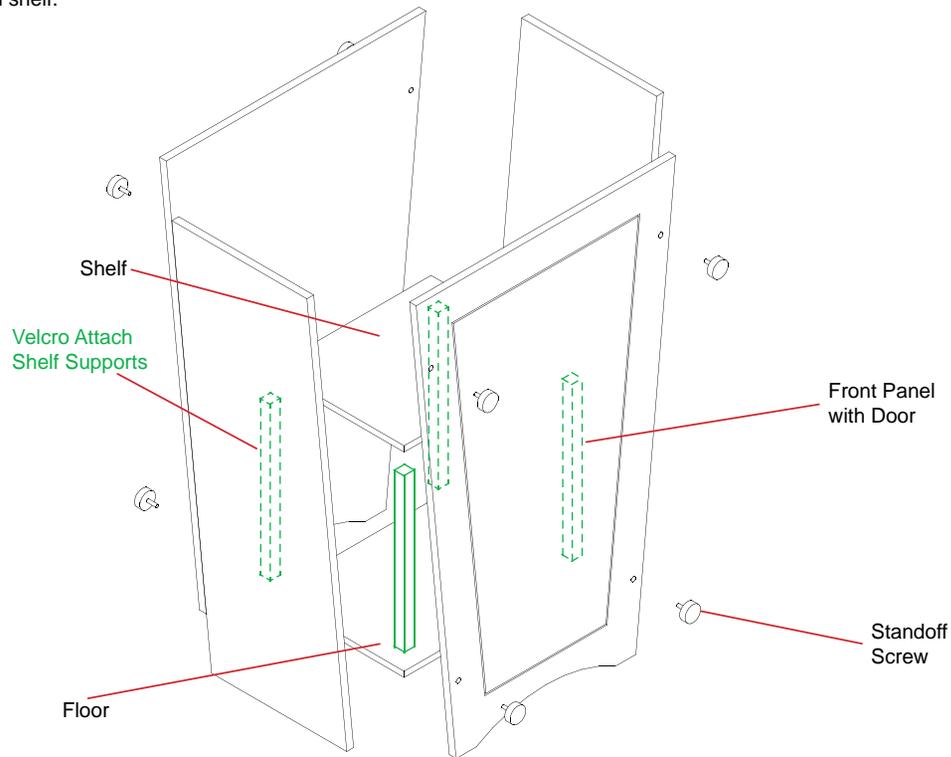

Attach the oval counter top to the pedestal base.

